

## SETTING UP SONY CAMERA FOR DEJERO AUDIO

Plug mic cord into INPUT 1 on right hand side of camera.



To the left of the plugged in mic cord, lift up latch that is labeled “LINE - MIC - MIC+48V”



Push switches to “MIC” on Input 1 and Input 2.



On the left hand side of the camera, flip open the latch that says “Audio Level”.



Push down the top left hand side switch to "INPUT1".  
Push down the bottom left hand side switch to "INPUT 2"  
Push down both right hand side switches to "MAN".  
Make sure the dials that are labeled "CH1" and "CH2" are both around "5".

